


LASER®

Barrel Pump

Instructions

Contents

- 1 Body of Pump (complete with adaptor for Senior Rieke Flex Spout)
- 2 Delivery Spout
- 3 2 piece barrel pipe with connector
- 4 2 x spacers for reduced delivery
- 5 3 x spring clips for pipe connection
- 6 1 x Jubilee Clip for Delivery Spout

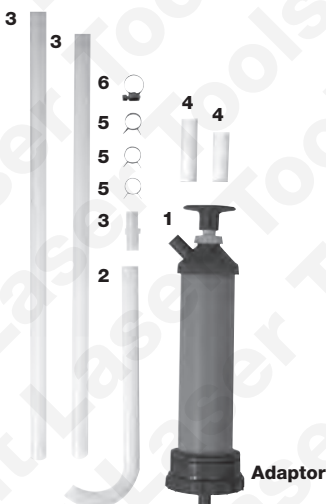

Assemble the Transfer Pump

- 1 Attach Delivery Spout and secure with jubilee clip
- 2 Reduced flow can be achieved sliding one of the two spacers over the delivery pump shaft.
 - a. Small spacer will reduce flow to 6oz per stroke
 - b. Large spacer will reduce flow to 4oz per stroke
 - c. Both spacers will reduce flow to 2oz per stroke
- 3 If both barrel pipes are required (to reach the floor of the barrel) use connector and secure with spring clips. Pipes can be cut to correct size.
- 4 Secure barrel pipes to pump with spring clips
- 5 If the barrel has the Senior Rieke Flex Spout leave the adaptor in place on the bottom of the pump.
- 6 If the barrel has standard screw connections, remove the adaptor by unscrewing anti-clockwise.
- 7 Two screw fittings are revealed.
- 8 Pump head will rotate to any position.

Senior Rieke Flex-Spout Closure (Metal Ring)

- 1 With the adaptor in place on the pump, remove the black cap from the black cap on the Flexi spout of the Drum.
- 2 The Adaptor will fit over the metal retainer ring and snap into place.
- 3 Remove by pulling towards one side. Adaptor should clip off easily.

ALWAYS USE EYE PROTECTION WHEN TRANSFERRING FLUIDS

ALWAYS WASH THROUGH THOROUGHLY AFTER USE



Safety First. Be Protected.

Guarantee

If this product fails through faulty materials or workmanship, contact our service department direct on: +44 (0) 1926 818186. Normal wear and tear are excluded as are consumable items and abuse.