



Adjustable Horizontal Coil

For use with Laser Heat Inductors - Part No 5834/5835



Additional Information

- Horizontally wound coil.
- Coil size can be adjusted by hand.
- Always use 2 to 4 coils for best result.
-
-

<http://lasertools.co.uk/product/1297>





Step 1
The Laser 1297 appears not to fit.



Step 2
Uncoil the 1297.



Step 3
Create a larger coil to fit over object (use 2-4 coils for best results).



Step 4
Once the correct size has been created, connect to your Heat Inductor.

