

## Brake Pad Thickness Gauge

A pencil type brake pad wear gauge that allows for the pad thickness to be accurately measured without the need to remove the wheel from the vehicle.



### Additional Information

- Check the life of the brake pads without removing any components.
- Easy to read colour coded scale.
- Gives a quick reference to brake pad condition.
- Manufactured from lightweight aluminium.
- 

<http://lasertools.co.uk/product/6678>

